


US4 & US1 Exploded Parts Diagram

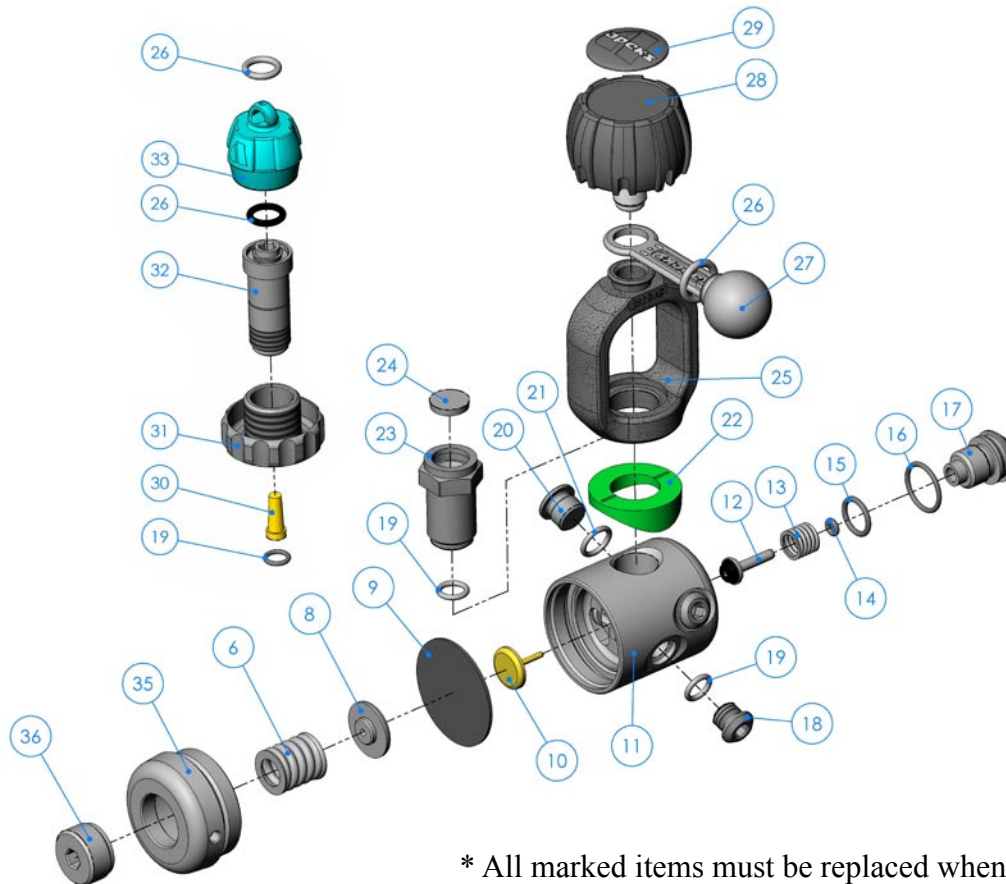

* All marked items must be replaced when serviced.

1	N/A		19*	AP1409	'O' Ring
2	N/A		20	AP1413	7/16" UNF Blanking Plug
3	N/A		21*	AP1445	'O' Ring
4	N/A		22	AP1446	Distance Piece
5	N/A		23	AP1407	Yoke Clamp Connector
6	AP1475	Spring	24*	AP1406	Disc Filter
7	N/A		25	AP1403	Yoke Clamp
8	AP1476	Spring Carrier	26*	AP1166	'O' Ring
9*	AP1478	Diaphragm	27	AP1404	Protective Cap
10	AP1479	Valve Lifter	28	AP1400	Yoke Clamp Screw
11	AP5201	Four Port Valve Body	29	AP5004/3	Decal
	AP5200	Single Port Valve Body	30*	AP1472	Conical Filter
12*	AP1419	H.P. Valve	31	AP1470	Handwheel 300 Bar
13	AP1415	Spring	32	AP1471	Handwheel Connector
14*	AP1299	'O' Ring	33	AP6202	DIN Protective Cap
15*	AP1410	'O' Ring	34	N/A	
16*	AP1300	'O' Ring	35	AP1485	Diaphragm Cap
17	AP5202	H.P. Balance Plug	36	AP1474/1	Spring Adjuster
18	AP1408	3/8" UNF Blanking Plug			