


TX50 Second Stage Diagram

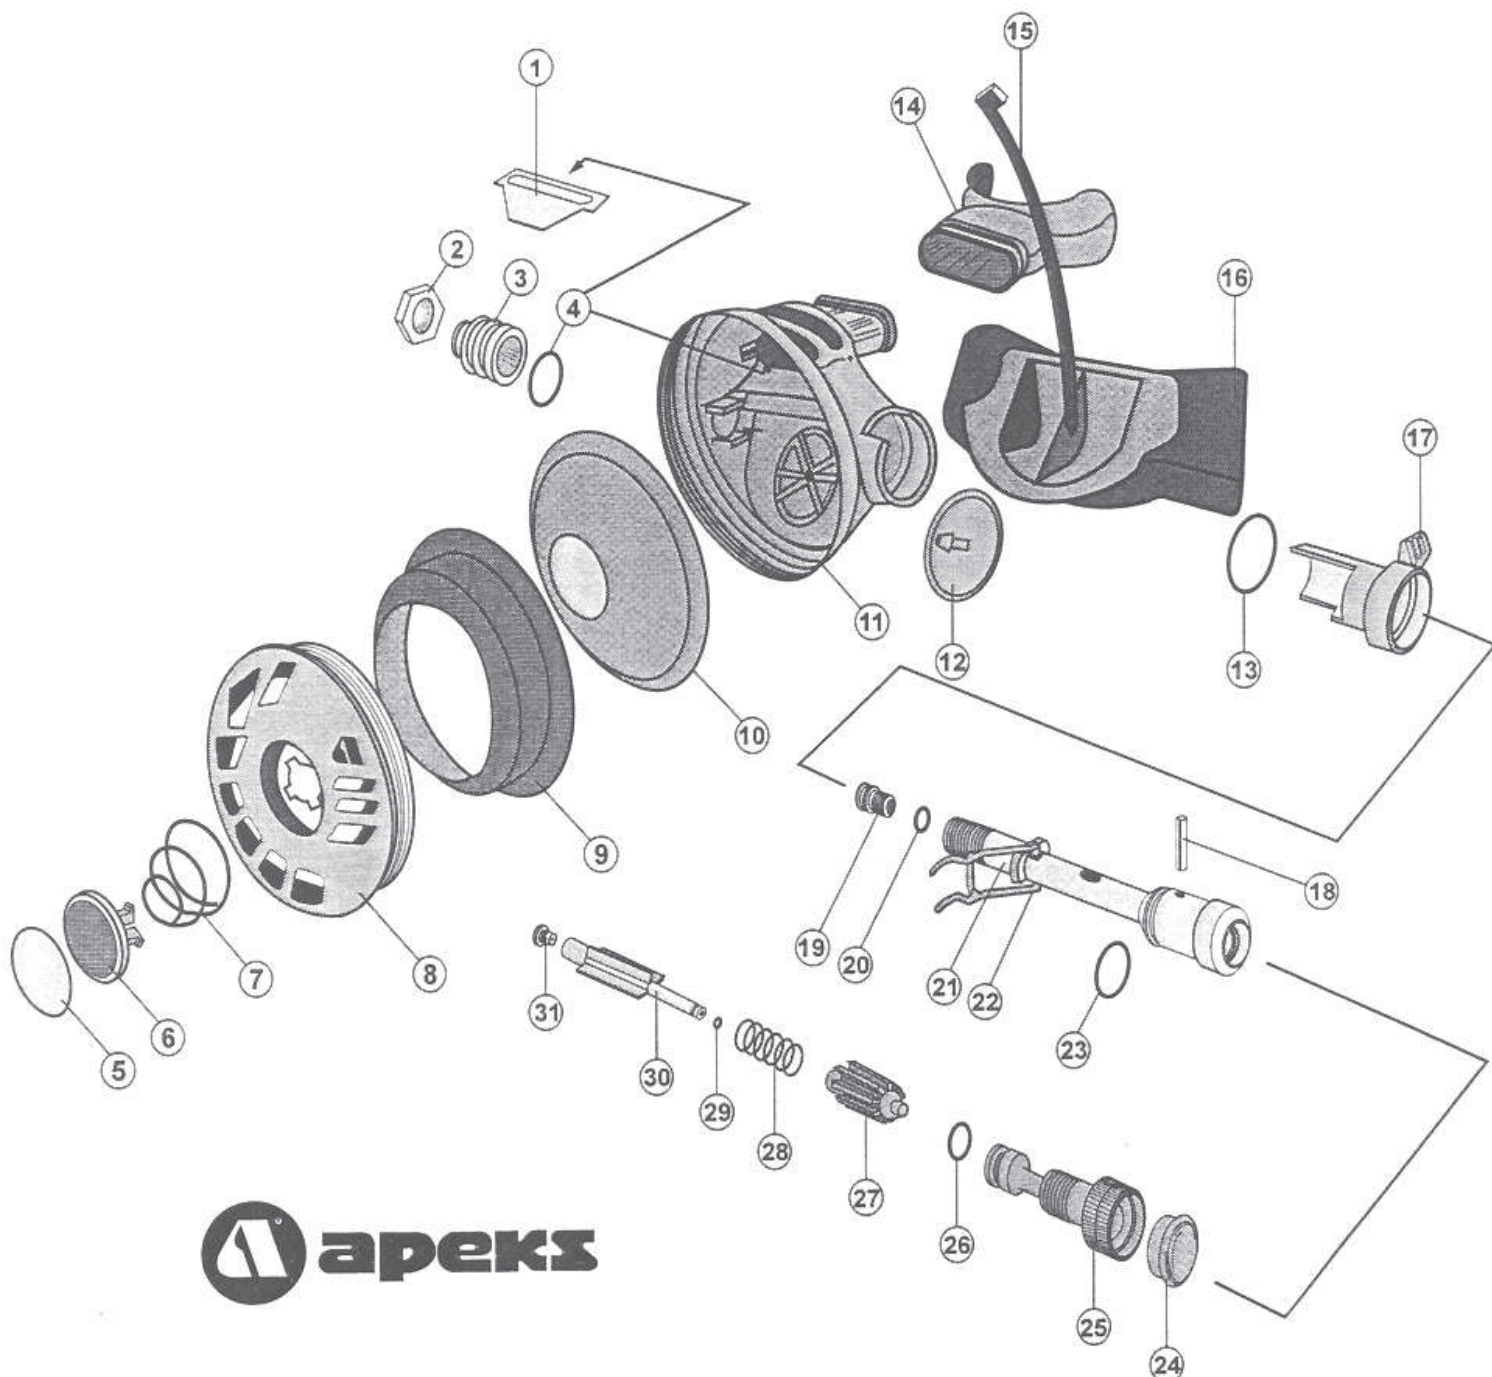

All items in brackets are to be replaced when servicing

1.	AP2037	Deflector	17.	AP2039	Venturi lever
2.	AP2031	Nut	18.	AP1151	Spring pin
3.	AP5002	Heat exchanger	19.	AP2033	Seat
(4)	AP1267	'O' ring	(20)	AP1154	'O' ring
5.	AP5004/1	Decal	21.	AP2028	Valve body
6.	AP2053	Purge button	22.	AP2035	Lever
7.	AP2020	Spring	(23)	AP1267	'O' ring
8.	AP2026	Case cover	24.	AP2030	Plug
9.	AP2025	Diaphragm cover	25.	AP2029	Adjusting screw
10.	AP2023	Diaphragm	(26)	AP1409	'O' ring
11.	AP5001	Case	27.	AP2030	Counter balance cylinder
12.	AP1429	Exhaust valve	28.	AP2021	Valve spring
(13)	AP1438	'O' ring	(29)	AP2041	'O' ring
14.	AP1434	Mouthpiece	30.	AP2036	Shuttle valve
15.	AP1677	Mouthpiece clip	(31)	AP2034	Rubber seating
16.	AP2040	Exhaust tee			