


Schematic & Parts List

Sea Air Second Stage

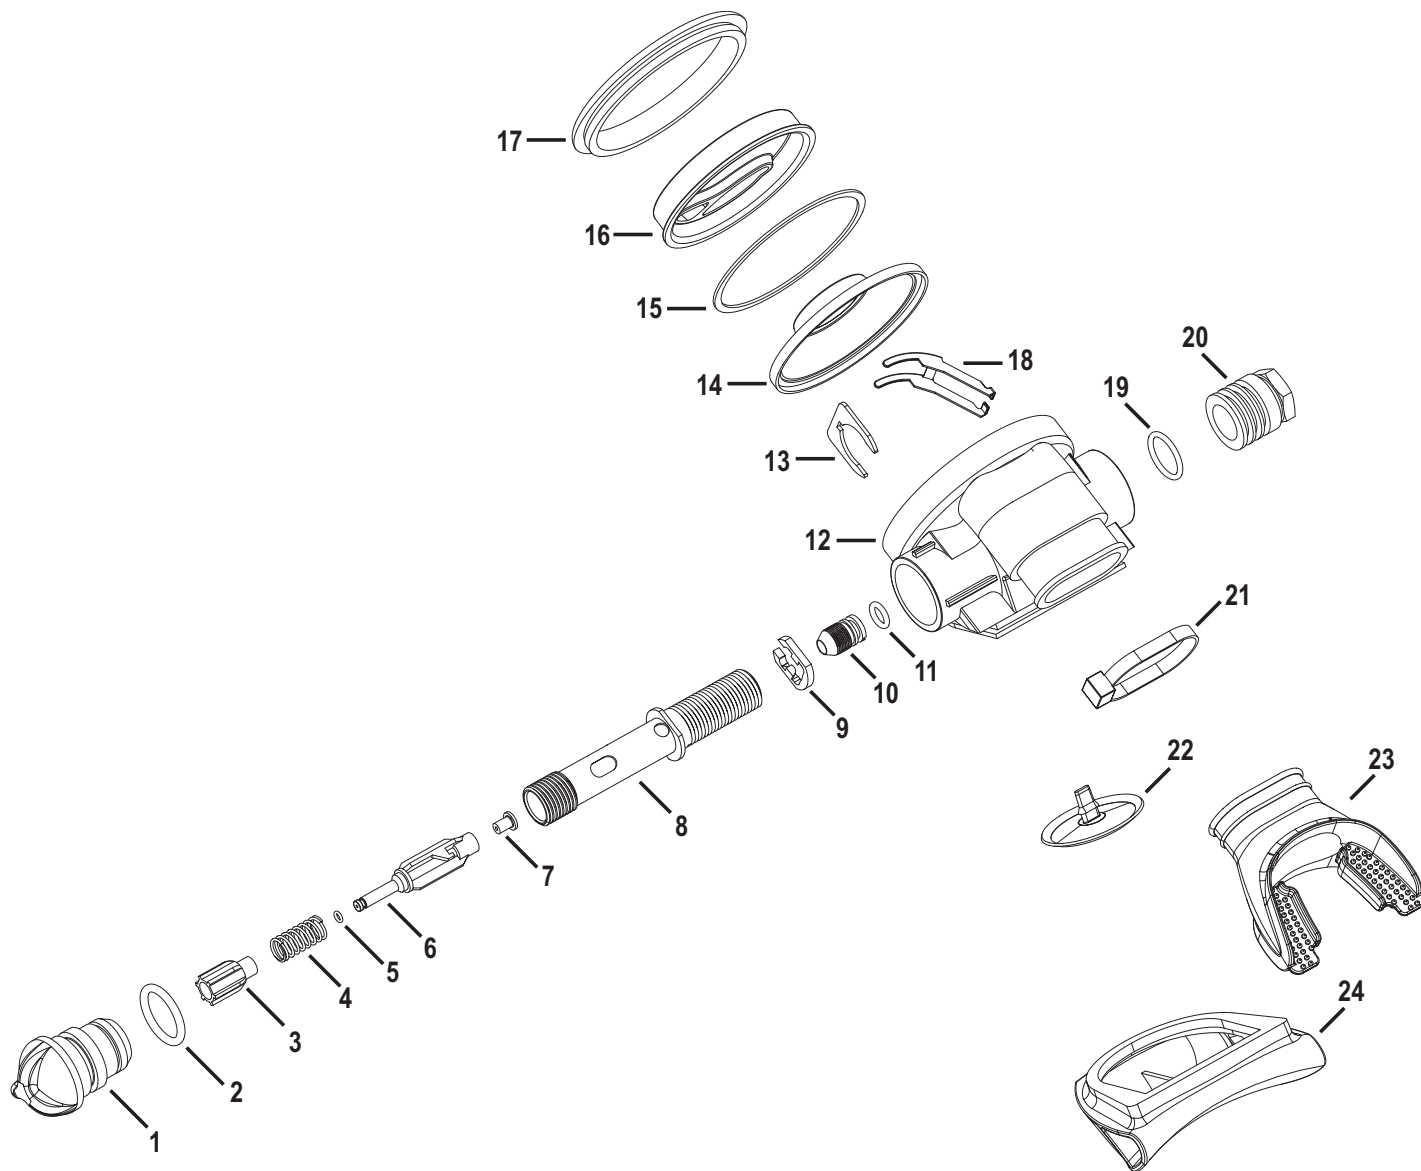

Ref #	PN	*ARP	Qty	Description
.....		-		Annual Service Kit
.....		-		SeaAir Second Stage
1	9022S		1	Adjustment Knob
2	2.115		1	O-Ring
3	9004.108		1	Balance Shuttle Cap
4	9018		1	LP Spring
5	5474		1	O-Ring
6	9016		1	Poppet
7	9015		1	LP Seat
8	9014B		1	Valve Tube
9	9004.105		1	Anti-Friction Clip
10	9026B		1	Adjustable Orifice
11	2.010		1	O-ring
12	9004		1	Housing
13	9020		1	Retaining Clip

Ref #	PN	*ARP	Qty	Description
14	9008		1	Diaphragm
15	9004.115		1	Thrust Washer
16	6814.2		1	Diaphragm Cover
17	9011SEE		1	Retaining Ring
18	9013		1	Lever
19	2.015		1	O-Ring
20	9002B		1	Inlet Fitting
21	1978.07		1	Tie-Strap
22	9027		1	Exhaust Valve Diaphragm
23	9006S		1	Mouthpiece
24	9028SEE		1	Exhaust Deflector

..... 16931.030 1 Max Flow LP Hose, 30 Inch

** Bold Indicates Automatic Replacement Part - Provided in Annual Parts Kit*