

MASK DIVE COMPUTER

OPERATING MANUAL

Addendum

Battery Replacement:

Information that follows amends and further clarifies the battery replacement procedure presented in the manual provided for Masks with integrated Dive Computers.

To remove the (2) screws that secure the Battery Cover, use a Phillips (crosshead) type screwdriver that has a # 1 flat tip rather than a pointed tip (see Fig. 1 on back) which could damage the heads of the screws preventing proper removal and installation.


When installing the new lubricated Battery Cover O-ring, make sure to place it on the beveled edge located inside the Battery Compartment (see Fig. 2 on back), and not on the Battery Cover.

When installing the Battery Cover, position it as illustrated in the manual or position it evenly over the Battery Compartment, then press it firmly straight down into position so that it seals evenly on top of the O-ring.

Ensure that the O-ring is not protruding (pinched), then secure the Battery Cover with the (2) screws using the flat tip Phillips screw driver.


(over)

Fig. 1 - Phillips Screwdriver

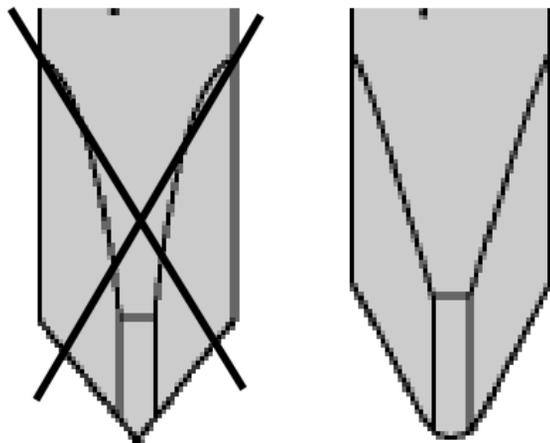

Use #1 Flat Tip

Fig. 2 - O-ring Installed

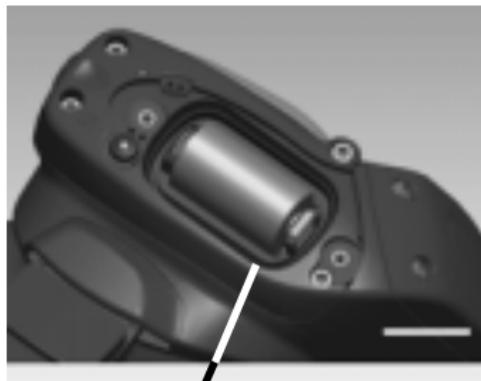

Place the O-ring on the beveled edge 'inside'.